RITZELABDECKUNG VORNE

FÜR HARLEY-DAVIDSON SPORTSTER-MODELLE (2021-)


PACKLISTE:

Menge	Beschreibung
1	Beltschutz vorne
2	Inbusschraube M6*20
1	Ritzelabdeckung 3-teilig
2	Inbusschraube M6*25 (niedrig)
1	Schutzabdeckung

MONTAGEANLEITUNG:


Entfernen Sie die vordere Ritzelabdeckung.

Montieren Sie die neue TB-Ritzelabdeckung mit den beiliegenden Klemmschrauben, sowie den beiden Inbusschrauben M6*25, am Ritzel.
Hinweis: Platzieren Sie dazu zuerst eine der Klemmschrauben, wie abgebildet, im oberen Bereich des Pulleys.

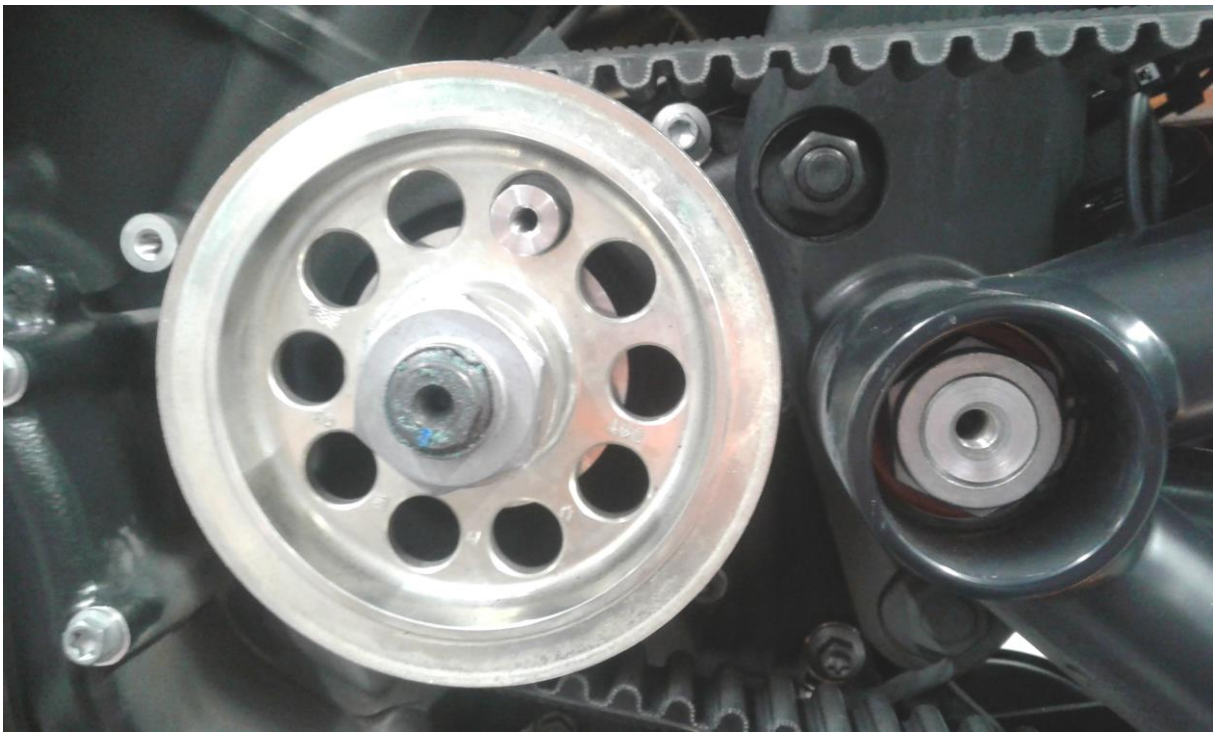

Die zweite Klemmschraube wird schon am neuen Cover vormontiert und ca. 2 Gewindegänge auf die Schraube geschraubt.

Setzen Sie nun das Cover schräg an, sodass die untere Klemmschraube in das Pulley greift.

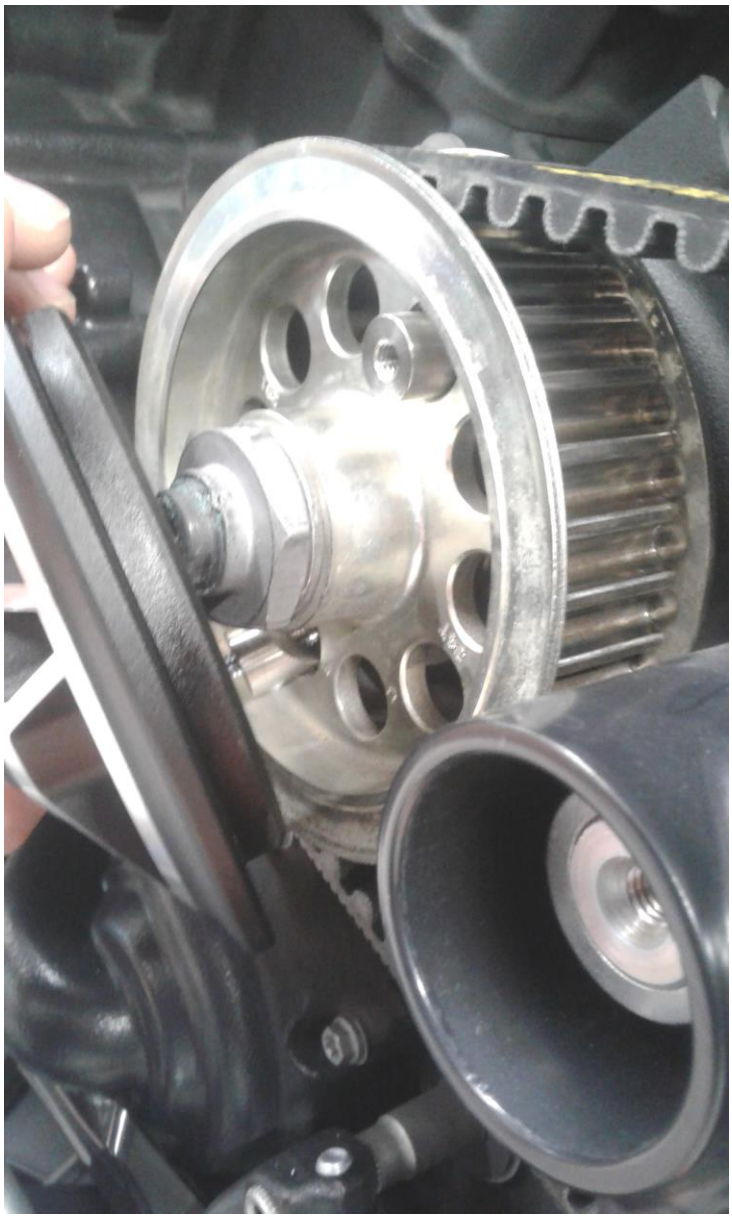

Ziehen Sie jetzt die Schrauben mit 10Nm fest und nutzen sie hierbei ein mittelfestes Schraubensicherungsmittel (z.B. Loctite)!

Montieren Sie den neuen TB-Beltschutz vorne mit den beiliegenden Inbusschrauben M6*20 und ziehen Sie diese mit 10Nm fest.



Montieren Sie die beiliegende Schutzabdeckung mit den OEM-Schrauben am Motordeckel.

Das Thunderbike-Team wünscht viel Vergnügen.
Gute Fahrt!

Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon(0049)2852 - 6777 -33
Telefax(0049)2852 - 5444
info@thunderbike.de

FRONT SPROCKET COVER

FOR HARLEY-DAVIDSON SPORTSTER MODELS (2021-)

THUNDERBIKE
★ ★ ★ Since 1985 ★ ★ ★
CUSTOMS


PACKING LIST:

amount	item
1	Front belt guard
2	Allen head screw M6*20
1	Sprocket cover (3 parts)
2	Allen head screw M6*25 (flat)
1	Safety cover

MOUNTING INSTRUCTIONS:


Remove the front oem sprocket cover.

Mount the new TB sprocket cover to the sprocket using the included clamping screws and both Allen head screws M6*25.
Attention: To do this, first place one oft he clamping screws in the upper area of the pulley as shown.

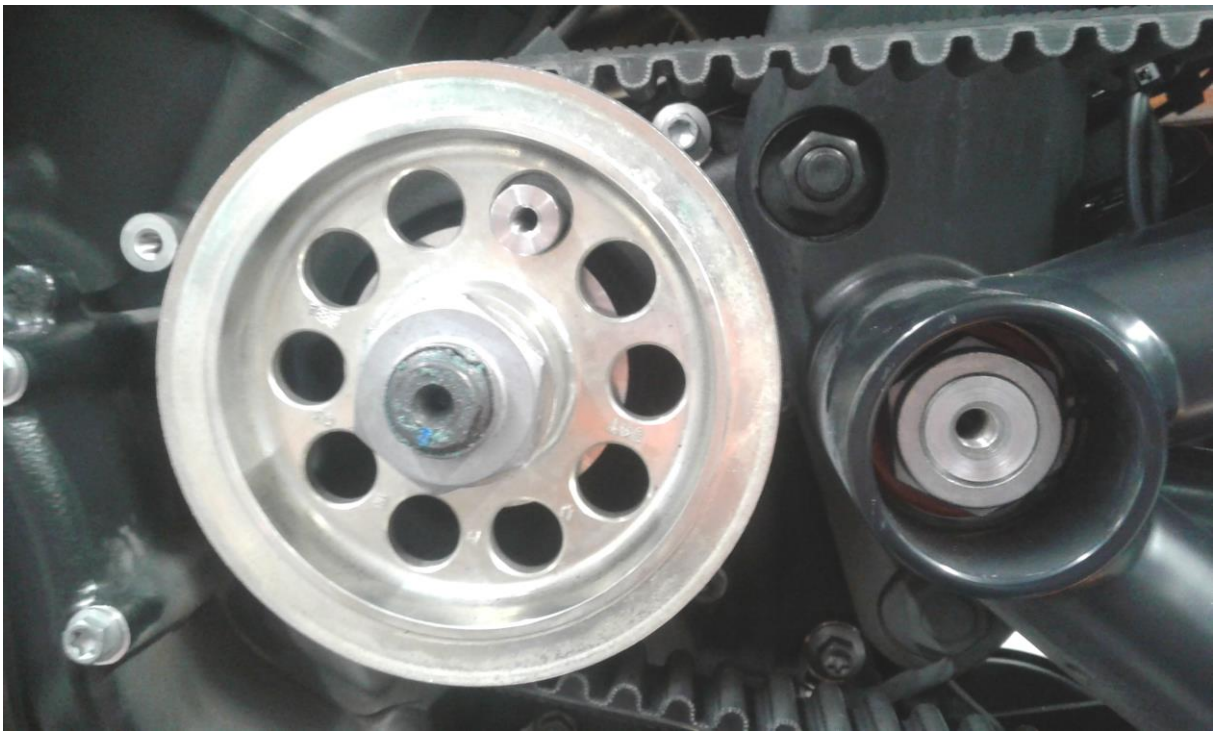

The second clamping screw must be already pre-assembled on the new cover and screwed approx. 2 threads onto the screw.

Now place the cover at an angle so that the lower clamping screw grips the pulley.

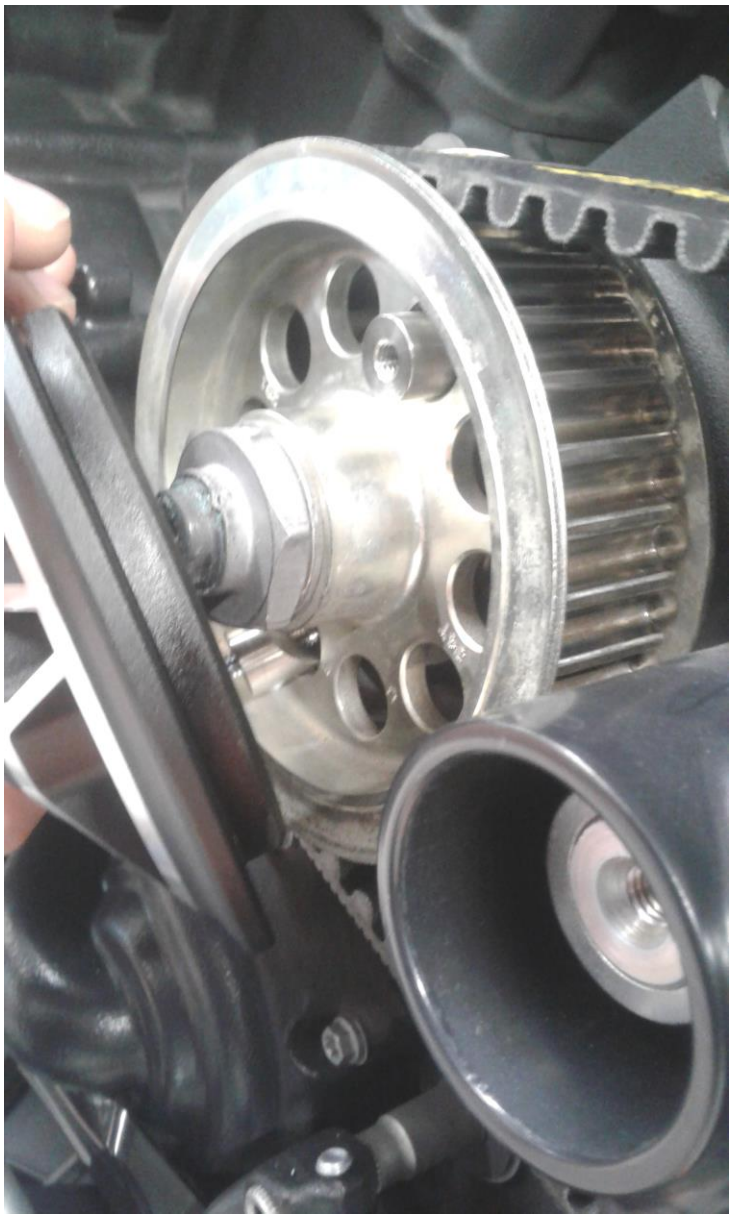

Then tighten the Allen head screws with 10Nm (7,4 ft lbs) torque and use a medium self-locking thread adhesive (e.g. Loctite)!

Install the new TB front belt guard using the included Allen head screws M6*20 and tighten them with 10Nm (7,4 ft lbs) torque.



Mount the included safety cover to the alternator housing using the oem screws.

The Thunderbike team wishes you fun with your new parts.
Have a nice and safe ride!

Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon (0049) 2852 - 6777 -33
Telefax (0049) 2852 - 5444
info@thunderbike.de